



# CODES

Service provided by



*"We Keep You Connected"*

# TV/VCR/DVD/TUNER COMBO CODES

---

## TV/DVD COMBO CODES

<b>BRAND</b>	<b>TV</b>	<b>DVD</b>
Akai	1427	2378
Apex	1163	2095
Axion	1459	2379
Bang & Olufsen	1453	2370
Broksonic	1114	2053
Coby	1460	2380
Cytron	1456	2374
DiamondVision	1461	2382
Hitachi	1226	2240
Ilo	1457	2375
Initial	1457	2381
JVC	1288	2206
LG	1255	2371
Mintek	1457	2381
Panasonic	1289	2207
Philips	1290, 1291, 1337	2208, 2209, 2243
Polaroid	1440, 1458	2377, 2409
RCA	1115, 1162, 1379	2063, 2099, 2289
Sansui	1122	2071
Sylvania	1150, 1464	2092, 2408
Toshiba	1116, 1293, 1294, 1345	2054, 2210, 2231
Westinghouse	1454	2372

## TV/RECEIVER COMBO CODES

<b>BRAND</b>	<b>TV</b>	<b>RECEIVER</b>
Philips	1390	5138
Polaroid	1393	5141

# TV/VCR/DVD/TUNER COMBO CODES

## TV/VCR COMBO CODES

<b>BRAND</b>	<b>TV</b>	<b>VCR</b>
Broksonic	1121, 1382, 1383	3081, 3202, 3213
Daewoo	1298	3150
Emerson	1382, 1383	3213, 3202
GE	1164, 1380, 1381	3090, 3201, 3203
JVC	1299	3151
Magnavox	1300, 1301, 1302, 1321	3152, 3153, 3154, 3181
Magnin	1380	3201
MGA	1380	3201
Mitsubishi	1381	3203
Orion	1382, 1383	3213, 3202
Panasonic	1305, 1306	3158, 3159
Penney	1380	3201
Philips	1307, 1308	3160, 3152
Quasar	1165, 1166	3091, 3092
RCA	1167, 1168, 1310, 1380, 1381	3093, 3094, 3162, 3201, 3203
Samsung	1161	3089
Sansui	1382, 1383	3202, 3213
Sanyo	1380	3201
Sharp	1311, 1312	3163, 3164
Sylvania	1145	3095
Toshiba	1006, 1267, 1313, 1315, 1319	3096, 3165, 3166, 3167, 3168, 3182
Zenith	1118, 1382, 1383	3097, 3213, 3202

## TV/DVD/VCR/TUNER COMBO CODES

<b>BRAND</b>	<b>TV</b>	<b>DVD</b>	<b>VCR</b>	<b>TUNER</b>
Panasonic	1292, 1295	2211, 2212	3145, 3146	5107, 5108

## TV/DVD/TUNER COMBO CODES

<b>BRAND</b>	<b>TV</b>	<b>DVD</b>	<b>TUNER</b>
Audiovox	1455	2373	5152

# TV/DVD/VCR/TUNER COMBO CODES

---

## TV/DVD/VCR COMBO CODES

<b>BRAND</b>	<b>TV</b>	<b>DVD</b>	<b>VCR</b>
Magnavox	1339	2241	3183
Panasonic	1123, 1152	2075, 2076	3087, 3086
RCA	1151	2077	3106
Samsung	1297	2214	3148
Sharp	1153, 1378	2086, 2292	3100, 3200
Sylvania	1027, 1124, 1296	2064, 2078, 2213	3105, 3088, 3147
Toshiba	1154, 1158, 1338	2093, 2094	3098, 3099, 3149

## TV/VCR/TUNER COMBO CODES

<b>BRAND</b>	<b>TV</b>	<b>VCR</b>	<b>TUNER</b>
Panasonic	1303, 1304	3155, 3156, 3157	5109, 5110, 5111
Philips	1309	3161	5112

## DVD/VCR COMBO CODES

<b>BRAND</b>	<b>DVD</b>	<b>VCR</b>
Apex	2229	3189
Broksonic	2072	3082
CineVision	2230	3242
Daewoo	2062	3076
Emerson	2073	3083
Go Video	2046, 2127, 2129, 2230, 2239	3066, 3109, 3110, 3188, 3193, 3221
Hitachi	2126, 2173	3117, 3169
Insignia	2369	3239
JVC	2047, 2097, 2166, 2232, 2166, 2359, 2360, 2361, 2362, 2364, 2365, 2366, 2367	3067, 3118, 3170, 3194, 3171, 3228, 3229, 3230, 3231, 3234, 3235, 3236, 3237
LG	2363, 2368	3233, 3238
Magnavox	2237	3190
Panasonic	2066, 2167, 2228	3078, 3172, 3191
Philips	2051, 2169	3071, 3173
Polaroid	2007	3111

# DVD/VCR COMBO, TV CODES

## DVD/VCR COMBO CODES

<b>BRAND</b>	<b>DVD</b>	<b>VCR</b>
RCA	2048, 2165, 2172	3068, 3174, 3175
Samsung	2049, 2074, 2085, 2233, 2290, 2311	3069, 3084, 3101, 3184, 3214, 3218, 3232
Sanyo	2050	3070
Sharp	2170, 2174	3176, 3177
Sony	2065, 2067, 2171, 2238, 2244, 2355, 2356, 2357	3104, 3085, 3179, 3187, 3192, 3178, 3224, 3225, 3226, 3240
Toshiba	2080, 2084, 2168, 2235, 2312, 2358	3102, 3103, 3180, 3185, 3219, 3227, 3241
Zenith	2052, 2128, 2234, 2236	3072, 3119, 3186

## TV CODES

<b>BRAND</b>	<b>CODES</b>
Abex	1098
Admiral	1001, 1099
Advent	1005, 1053, 1110, 1113
Adventura	1100
Aiko	1015
Aiwa	1034
Akai	1002, 1427
Alleron	1044
Amtron	1036
Anam National	1003, 1036
AOC	1004, 1005
Apex	1111, 1119, 1163, 1256
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Benq	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383

# TV CODES

---

## TV CODES

<b>BRAND</b>	<b>CODES</b>
Brokwood	1004
Candle	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Colortyme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Daytron	1004, 1097
DiamondVision	1461
Dimensia	1000
Dumont	1160
Durabrand	1259
Dynatech	1004
Electroband	1002
Electrohome	1002, 1003, 1004, 1018, 1021
Emerson	1004, 1011, 1013, 1025, 1028, 1031, 1033, 1036, 1044, 1045, 1080, 1097, 1101, 1102, 1107, 1382, 1383
Envision	1004
Fisher	1043, 1045, 1047, 1103
Fujitsu	1029, 1044
Funai	1036, 1044, 1384
Futuretec	1036
Gateway	1038
GE	1000, 1003, 1004, 1008, 1021, 1048, 1049, 1063, 1068, 1094, 1144, 1164, 1224, 1367, 1380, 1381, 1385, 1386

## TV CODES

<b>BRAND</b>	<b>CODES</b>
Gibraltar	1160
Goldstar	1004, 1005, 1011, 1018, 1050, 1090, 1091, 1097, 1098, 1400, 1401
Grunpy	1036, 1044
Hallmark	1004
Harley Davidson	1384
Harvard	1036
Hisene	1112
Hitachi	1004, 1011, 1012, 1051, 1052, 1084, 1085, 1086, 1087, 1102, 1225, 1384
HP	1408
Ilo	1457
IMA	1036
Infinity	1053
Janiel	1100
JBL	1053
JCB	1002
JC Penney	1000, 1004, 1005, 1007, 1012, 1021, 1048, 1049, 1058, 1063, 1068, 1072, 1073, 1075, 1097, 1098
Jensen	1004, 1232, 1285, 1314, 1376
JVC	1011, 1012, 1026, 1049, 1052, 1054, 1055, 1080, 1092, 1117, 1131, 1235, 1288, 1299
Kawasho	1002, 1004
Kenwood	1004, 1018
Kloss Novabeam	1036, 1056, 1057, 1100
KTV	1036, 1097, 1101
LG	1005, 1396, 1397, 1398, 1399, 1402, 1403, 1404, 1405
Lloyd's	1384
Loewe	1053
Logik	1001
Luxman	1004
LXI	1000, 1004, 1045, 1053, 1058, 1068, 1075

# TV CODES

---

## TV CODES

<b>BRAND</b>	<b>CODES</b>
Magnavox	1004, 1007, 1018, 1053, 1056, 1057, 1059, 1060, 1083, 1110, 1147, 1228, 1260, 1300, 1301, 1302, 1321, 1326, 1339, 1365, 1366, 1371, 1384, 1387
Magnin	1380
Majestic	1001
Marantz	1004, 1051, 1053
Media Center	1408
Megatron	1004, 1051
Memorex	1001, 1004, 1005, 1022, 1045
MGA	1004, 1005, 1018, 1021, 1047, 1061, 1062, 1380
Midland	1049, 1068, 1097, 1098, 1160
Minutz	1048
Mitsubishi	1004, 1005, 1018, 1021, 1047, 1061, 1062, 1081, 1381
Montgomery Ward	1001
Motorola	1003, 1099
MTC	1004, 1005, 1073
Multitech	1036
NAD	1004, 1058, 1075, 1085
NEC	1003, 1004, 1005
Net-Tv	1040
Nikko	1004, 1015
Norcent	1217, 1320
NTC	1015
Olevia	1420
Onwa	1036
Optimus	1085
Optonica	1064, 1099
Orion	1023, 1033, 1107, 1382, 1383
Panasonic	1003, 1010, 1049, 1053, 1096, 1123, 1152, 1231, 1289, 1292, 1295, 1303, 1304, 1305, 1306, 1385
Penney	1380, 1385
Philco	1003, 1004, 1005, 1007, 1011, 1018, 1053, 1056, 1057, 1059



## TV CODES

BRAND	CODES
Philips	1003, 1004, 1007, 1011, 1017, 1018, 1053, 1056, 1057, 1059, 1060, 1063, 1110, 1126, 1129, 1148, 1155, 1238, 1263, 1264, 1265, 1290, 1291, 1307, 1308, 1309, 1337, 1389
Philips Magnavox	1260, 1264, 1265, 1266
Pilot	1097
Pioneer	1104, 1185, 1102
Polaroid	1285, 1458
Portland	1004, 1005, 1015, 1097
Price Club	1073
Prima	1113
Prism	1049
Proscan	1000, 1008, 1068, 1108
Proton	1004, 1011
Pulsar	1160
Pulser	1004
Quasar	1003, 1039, 1049, 1096, 1165, 1166, 1385
Radio Shack/Realistic	1000, 1004, 1011, 1036, 1045, 1064, 1097, 1098, 1384
RCA	1000, 1003, 1004, 1005, 1008, 1018, 1049, 1065, 1066, 1067, 1068, 1069, 1070, 1071, 1082, 1102, 1104, 1106, 1108, 1115, 1151, 1162, 1167, 1168, 1268, 1269, 1270, 1271, 1310, 1355, 1359, 1361, 1370, 1373, 1379, 1380, 1381, 1385, 1386
Runco	1160
Sampo	1104, 1097, 1098, 1120
Samsung	1004, 1005, 1011, 1014, 1018, 1019, 1072, 1073, 1074, 1097, 1098, 1156, 1161, 1297, 1323, 1360, 1363, 1364
Sansui	1023, 1107, 1122, 1273, 1382, 1383, 1384
Sanyo	1045, 1062, 1095, 1103, 1380
Scotch	1004
Scott	1004, 1011, 1033, 1036, 1044
Sears	1000, 1004, 1012, 1018, 1044, 1045, 1047, 1055, 1058, 1068, 1075, 1076, 1103, 1105, 1384

# TV CODES

---

## TV CODES

<b>BRAND</b>	<b>CODES</b>
Sharp	1004, 1009, 1011, 1025, 1064, 1077, 1078, 1097, 1099, 1153, 1157, 1274, 1298, 1311, 1312, 1362, 1375, 1378
Shogun	1004
Signature	1001
Simpson	1007
Sony	1002, 1109, 1137, 1201, 1202, 1249, 1272, 1275, 1276, 1277, 1278, 1317, 1356, 1374, 1384, 1388
Soundesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starlite	1036
Supre-Macy	1100
Supreme	1102
Sylvania	1004, 1007, 1018, 1027, 1053, 1056, 1057, 1059, 1060, 1124, 1145, 1150, 1279, 1296, 1387, 1464
Symphonic	1024, 1031, 1036, 1105, 1280, 1384
Tandy	1099
Tashiko	1058
Tatung	1003
Technics	1049
Techwood	1004, 1049
Teknika	1001, 1004, 1005, 1007, 1011, 1012, 1015, 1036, 1044, 1060, 1073, 1096, 1097, 1111
Tera	1004, 1011
Thomas	1384
TMK	1004
Toshiba	1006, 1045, 1058, 1073, 1075, 1079, 1093, 1116, 1154, 1158, 1159, 1175, 1252, 1267, 1281, 1282, 1283, 1284, 1286, 1293, 1294, 1313, 1315, 1319, 1338, 1364, 1377
Totevision	1097
Universal	1047, 1063
Victor	1055
Vidtech	1004, 1005
Viking	1100

## TV CODES

<b>BRAND</b>	<b>CODES</b>
Vizio	1004, 1018, 1041, 1042, 1184, 1188
Wards	1000, 1001, 1004, 1005, 1018, 1031, 1044, 1048, 1053, 1056, 1057, 1059, 1060, 1063, 1064
White Westinghouse	1013
Yamaha	1004, 1005, 1018
Zenith	1001, 1089, 1118, 1125, 1161, 1287, 1357, 1382, 1383, 1384

## HDTV CODES

<b>BRAND</b>	<b>CODES</b>
Acer	1041, 1192
Akai	1427, 1432
Apex	1088
Astar	1434
Audivox	1455
Axion	1459
Benq	1136
Coby	1460
Daewoo	1135
Dell	1141, 1142, 1146, 1394, 1395, 1409
Element	1431
Emerson	1468
Emprex	1438
Epson	1422, 1451
Fujitsu	1029
Gateway	1038, 1449
Hewlett Packard	1419, 1444, 1445, 1452
Hitachi	1030, 1132, 1133, 1134, 1191, 1208, 1209, 1210, 1211, 1212, 1226, 1322, 1324, 1328, 1344, 1447
HP	1419, 1445, 1452
Ilo	1412, 1435, 1436
InFocus	1450
Initial	1457

# HDTV CODES

---

## HDTV CODES

<b>BRAND</b>	<b>CODES</b>
Insignia	1437
JVC	1130, 1131, 1227
LG	1343, 1346, 1396
Magnavox	1329, 1358, 1372, 1414
Maxent	1424
Mintek	1457
Mitsubishi	1032, 1213, 1229, 1230, 1448
NEC	1193, 1423
NET-TV	1040
Olevia	1406, 1418, 1421, 1462
Panasonic	1140, 1169, 1170, 1194, 1233, 1234, 1331, 1336, 1410, 1417, 1442, 1466
Philips	1126, 1129, 1236, 1237, 1239, 1261, 1334, 1351, 1390, 1411
Pioneer	1035, 1195, 1240, 1335, 1469, 1470
Polaroid	1262, 1391, 1292, 1393, 1396, 1431, 1440
Proscan	1000
Proton	1430
Proview	1407
RCA	1143, 1196, 1241, 1242
Sampo	1038, 1243
Samsung	1019, 1171, 1172, 1173, 1174, 1175, 1197, 1198, 1199, 1200, 1245, 1246, 1325, 1327, 1352, 1354, 1443
Sceptre	1467
Scott	1428
Sharp	1138, 1176, 1177, 1214, 1244, 1247, 1248, 1348, 1350, 1415, 1416
Sony	1037, 1128, 1137, 1178, 1215, 1216, 1218, 1219, 1220, 1221, 1250, 1251, 1316, 1318, 1330, 1347, 1413
SVA	1446
Sylvania	1046, 1465
Syntax	1418
Syntax-Brilliant	1418
Tatung	1426

## HDTV CODES

<b>BRAND</b>	<b>CODES</b>
Toshiba	1127, 1179, 1203, 1204, 1222, 1223, 1332, 1340, 1341, 1345, 1353
Trutech	1425
Viewsonic	1038, 1149, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1188, 1189, 1190, 1205, 1206, 1441
Viore	1435
Vizio	1429, 1433, 1439
Westinghouse	1454
Zenith	1020, 1139, 1207, 1253, 1255, 1333, 1342, 1349

## DVD CODES

<b>BRAND</b>	<b>CODES</b>
Aiwa	2026, 2131
Akai	2378
Amphion MediaWorks	2342
AMW	2342
Apex	2001, 2056, 2057, 2061, 2095, 2098, 2229, 2250, 2316, 2322, 2330
Apex Digital	2261, 2262, 2263, 2266, 2269, 2291
Arrgo	2325
Astar	2354
Audiovox	2132, 2373, 2388
Axion	2379
Bang & Olufsen	2324, 2370
Blaupunkt	2136, 2322
Bose	2122, 2130, 2215
Boss	2336
Broksonic	2053, 2072, 2284
Cambridge SoundWorks	2395
Cinevision	2152, 2195
Clarion	2100
Classic	2101, 2391
Coby	2380, 2387

# DVD CODES

---

## DVD CODES

<b>BRAND</b>	<b>CODES</b>
Curtis	2387
Cyberhome	2083, 2325
Cytron	2374
Daewoo	2058, 2062, 2063, 2137, 2138, 2190
Denon	2110, 2133, 2040, 2216, 2247, 2253, 2317
Desay	2344
DiamondVision	2382
Disney	2321
Durabrand	2326
Eclipse	2335
Emerson	2002, 2059, 2073, 2321, 2327, 2392
ESA	2327, 2394
Fisher	2112, 2134, 2255
Funai	2002, 2321, 2327
Gateway	2346
GE	2079, 2118, 2041, 2261, 2272, 2319, 2322
Go Video	2046, 2124, 2127, 2129, 2230, 2239, 2249, 2346
GPX	2114, 2390
Greenhill	2322
Grundig	2320
Harmon Kardon	2125
Hitachi	2000, 2027, 2126, 2173, 2240
Ilo	2375
Initial	2322, 2381
Insignia	2327, 2369, 2394
Irradio	2149, 2150
JVC	2017, 2028, 2047, 2090, 2096, 2097, 2115, 2166, 2204, 2206, 2217, 2218, 2232, 2242, 2265, 2277, 2283, 2359, 2360, 2361, 2362, 2364, 2365, 2366, 2367
Kenwood	2142, 2148
KLH	2322
Konka	2029, 2030, 2376
Koss	2060, 2200
Lasonic	2081

## DVD CODES

BRAND	CODES
Lenoxx	2326
LG	2297, 2303, 2339, 2352, 2363, 2368, 2371
Liteon	2346, 2353
Magnavox	2002, 2018, 2033, 2089, 2237, 2241, 2245, 2259, 2270, 2293, 2318, 2320, 2321, 2327
Marantz	2143, 2320
Memorex	2003
Mintek	2004, 2322, 2381
Mitsubishi	2019, 2123, 2145, 2147
NAD	2059, 2139
Nakamichi	2116
Nesa	2322
Nexxtech	2140, 2256, 2328
Norcent	2005, 2117
Onkyo	2006, 2219, 2220, 2318
Oppo	2323
Oritron	2009
Panasonic	2031, 2066, 2075, 2076, 2104, 2105, 2106, 2111, 2167, 2179, 2188, 2198, 2207, 2211, 2212, 2221, 2228, 2248, 2151, 2153, 2154, 2155, 2258, 2268, 2300, 2318, 2384, 2385, 2386, 2398, 2399
Philips	2018, 2032, 2033, 2045, 2051, 2091, 2109, 2156, 2157, 2158, 2159, 2169, 2208, 2209, 2222, 2243, 2259, 2260, 2264, 2282, 2285, 2302, 2304, 2318, 2320, 2321, 2404
Pioneer	2008, 2021, 2160, 2164, 2191, 2223, 2224, 2267, 2310, 2237, 2400
Polaroid	2007, 2377, 2409
Polk Audio	2320
Presidian	2321
Proscan	2010, 2118, 2144, 2205, 2319
Qwestar	2009
RCA	2010, 2048, 2055, 2063, 2077, 2099, 2107, 2118, 2161, 2165, 2172, 2177, 2181, 2261, 2275, 2281, 2287, 2289, 2319, 2322, 2331

# DVD CODES

---

## DVD CODES

<b>BRAND</b>	<b>CODES</b>
Sampo	2119
Samsung	2012, 2049, 2074, 2085, 2102, 2175, 2186, 2196, 2214, 2233, 2246, 2274, 2279, 2286, 2290, 2294, 2295, 2299, 2311, 2314, 2333, 2340, 2347, 2351
Sansui	2071
Sanyo	2034, 2050, 2120, 2393
Sensory Science	2345
Sharp	2013, 2015, 2044, 2082, 2086, 2170, 2174, 2292, 2321, 2396
Sherwood	2121, 2397
Sony	2014, 2020, 2022, 2065, 2067, 2068, 2069, 2070, 2087, 2103, 2108, 2113, 2162, 2171, 2176, 2178, 2182, 2187, 2189, 2192, 2193, 2201, 2202, 2203, 2226, 2238, 2244, 2251, 2257, 2273, 2278, 2280, 2288, 2296, 2298, 2305, 2306, 2307, 2309, 2313, 2315, 2329, 2332, 2338, 2355, 2356, 2357, 2405, 2406, 2407
Sungale	2343
Sylvania	2002, 2064, 2078, 2092, 2194, 2213, 2321, 2327, 2408
Symphonic	2321
Techwood	2141
TiVo	3074, 3244, 3245, 3246, 3249, 3250
Toshiba	2023, 2025, 2037, 2038, 2040, 2041, 2054, 2080, 2084, 2088, 2093, 2094, 2135, 2168, 2180, 2183, 2184, 2185, 2197, 2210, 2227, 2231, 2235, 2259, 2271, 2276, 2284, 2301, 2312, 2318, 2334, 2341, 2348, 2349, 2350, 2358, 2401, 2402, 2403
Trutech	2345
Urban Concepts	2318
Venturer	2011
Westinghouse	2372
Xbox	2319
Yamaha	2106, 2146, 2163, 2320, 2389
Zenith	2039, 2052, 2128, 2199, 2234, 2236, 2252, 2308, 2318



# AMPLIFIER CODES

## AUX GROUP

### AMPLIFIER CODES

<b>BRAND</b>	<b>CODES</b>
Adcom	6055
Aiwa	6003, 6020
Carver	6002
Citizen	6026
Curtis Mathes	6046
Denon	6014, 6039, 6057
Fisher	6002
GE	6028, 6045
Goldstar	6016, 6021
Harman Kardon	6013, 6047
Hitachi	6034
JBL	6050
JVC	6018, 6024, 6041
Kenwood	6015, 6022
Left Coast	6047
Magnavox	6035
Marantz	6000, 6047, 6058
Nakamichi	6012
NEC	6033, 6048
Onkyo	6005, 6006, 6017, 6054, 6056
Optimus	6008, 6046
Panasonic	6001, 6040
Parasound	6059
Philips	6047
Pioneer	6004, 6009, 6010, 6023, 6036, 6046, 6051
Polk Audio	6047
Proton	6035
Quasar	6001
RCA	6025, 6046
Sharp	6029, 6030, 6031, 6032
Sherwood	6011
Shure	6048

# AMPLIFIER, HTIB CODES

---

## AMPLIFIER CODES

<b>BRAND</b>	<b>CODES</b>
Sony	6020, 6042, 6044, 6049
Soundesign	6045
Teac	6019
Technic/Technics	6001, 6040
Toshiba	6027
Victor	6024
Ward	6045
Yamaha	6007, 6037, 6038, 6043, 6052, 6053

## HOME THEATER IN A BOX (HTIB) CODES

<b>BRAND</b>	<b>AUDIO CODE</b>	<b>DVD CODE</b>
Apex	4049	2316
Audiovox	4053	2388
Bose	4000	2130, 2215
Cambridge Sound Works	4060	2395
Classic	4055	2391
Coby	4052	2387
Curtis	4056	2387
Denon	4012	2216
Emerson	4057	2392
GPX	4055	2390
Insignia	4059	2394
JBL	4001	2043
JVC	4002, 4013, 4014, 4028	2035, 2217, 2218, 2283
Koss	4003, 4015	2060, 2200
LG	4041	2303
Magnavox	4035	2293
Onkyo	4004, 4016, 1047	2024, 2219, 2220
Panasonic	4005, 4048, 4030, 4038, 4050, 4051	2104, 2221, 2300, 2384, 2385, 2386
Philips	4006, 4019, 4027, 4039, 4042	2036, 2222, 2282, 2304
Pioneer	4007, 4020, 4021, 4029	2016, 2223, 2224

# HTIB, RECEIVER/TUNER CODES

## HOME THEATER IN A BOX (HTIB) CODES

BRAND	AUDIO CODE	DVD CODE
RCA	4008, 4026	2042, 2281, 2161
Samsung	4033, 4036, 4047	2294, 2295, 2299, 2314
Sanyo	4058	2393
Sharp	4061	2396
Sherwood	4062	2397
Sony	4009, 4010, 4022, 4023, 4024, 4031, 4032, 4034, 4043, 4044, 4045, 4046, 4048	2113, 2108, 2225, 2226, 2278, 2288, 2296, 2305, 2306, 2307, 2315
Toshiba	4025, 4040	2227
Venturer	4011	2011
Yamaha	4054	2389
Zenith	4037	

## RECEIVER/TUNER - RECEIVER/CD CODES

BRAND	CODES
ADC	5144
Aiwa	5000, 5001, 5002, 5004, 5005, 5006, 5034, 5143
Akai	5083
Audiotronic	5145
Audiovox	5152
Bang & Olufsen	5151
Bose	5007
Capetronic	5144
Carver	5000, 5143, 5145
Denon	5008, 5035, 5036, 5037, 5038, 5039, 5040, 5041, 5042, 5043, 5044, 5045, 5046, 5047, 5048, 5049, 5050, 5051, 5052, 5053, 5054, 5114, 5124
Eclipse	5149
Gradiente	5153
Harman Kardon	5000, 5009, 5055, 5056, 5142, 5143
JBL	5009
JVC	5010, 5057, 5058, 5059, 5116

# RECEIVER/TUNER - RECEIVER/CD CODES

---

## RECEIVER/TUNER - RECEIVER/CD CODES

<b>BRAND</b>	<b>CODES</b>
Kenwood	5011, 5012, 5013, 5060, 5061, 5062, 5063, 5064, 5065, 5066, 5067, 5068, 5123, 5127, 5128, 5132, 5148
Linn	5000, 5143
Magnavox	5000, 5143, 5144, 5145
Marantz	5000, 5069, 5143, 5145
Mitsubishi	5070, 5171, 5072
Onkyo	5018, 5073, 5074, 5075, 5076, 5077, 5078, 5079, 5080, 5081, 5082, 5084, 5085, 5086, 5087, 5130, 5131, 5140
Optimus	5144
Panasonic	5019, 5020, 5107, 5108, 5109, 5110, 5111, 5115, 5126
Philips	5000, 5112, 5138, 5143, 5145, 5154
Pioneer	5021, 5022, 5088, 5089, 5090, 5091, 5092, 5093, 5094, 5119, 5120, 5144, 5147
Polaroid	5141
Polk Audio	5143
RCA	5024, 5025, 5026, 5137, 5144
Rotel	5150
Samsung	5139
Sansui	5000, 5143
Sherwood	5027
Sony	5017, 5023, 5028, 5029, 5030, 5031, 5032, 5033, 5095, 5096, 5097, 5113, 5117, 5121, 5125, 2129, 5133, 5134, 5136, 5146
Technics	5016, 5019, 5020, 5098, 5099, 5100, 5101, 5115, 5122, 5126
Thorens	5145
Wards	5000, 5021, 5143
Yahama	5003, 5014, 5015, 5021, 5102, 5103, 5104, 5105, 5106, 5118, 5135

## VCR CODES

<b>BRAND</b>	<b>CODES</b>
ABS	3223
Admiral	3001
Adventura	3021
Aiwa	3021
Akai	3003, 3055, 3058
American High	3016
Apex	3189
Audio Dynamics	3005, 3006
Bang & Olufsen	3222
Bell & Howell	3007
Broksonic	3081, 3082, 3202, 3213
Candle	3011, 3013, 3014
Canon	3016
Carver	3036
CineVision	3242
Citizen	3011, 3013, 3014
Colortyme	3005
Curtis Mathes	3000, 3005, 3014, 3016, 3212
CyberPower	3223
Daewoo	3011, 3013, 3021, 3076, 3120, 3150
DBX	3005, 3006
Dell	3223
Dimensia	3000
Dynatech	3021
Electrohome	3023
Emerson	3003, 3011, 3021, 3023, 3038, 3083, 3202
Expressvu	3247
Fisher	3007, 3029, 3030
Fuji	3016, 3058
Funai	3002, 3021
Garrard	3021
Gateway	3223
GE	3000, 3016, 3059, 3090, 3201, 3203, 3212
Go Video	3066, 3073, 3109, 3110, 3188, 3193, 3221

# VCR CODES

---

## VCR CODES

<b>BRAND</b>	<b>CODES</b>
GOI	3247
Goldstar	3005, 3014
Gradiente	3021
Harley Davidson	3021
Harman Kardon	3005
Headquarter	3007
Hewelett Packard	3223
Hitachi	3052, 3055, 3059, 3117, 3169
HNS	3243
HP	3223
HTS	3247
Hughes	3246, 3250
Humax	3246
Hush	3223
Insignia	3239
Instant Replay	3016
JC Penney	3005, 3006, 3007, 3016, 3030, 3036, 3052
JCL	3016
Jensen	3055
JVC	3005, 3006, 3007, 3014, 3055, 3060, 3067, 3118, 3121, 3122, 3123, 3124, 3125, 3126, 3127, 3151, 3170, 3171, 3194, 3205, 3228, 3229, 3230, 3231, 3234, 3235, 3236, 3237, 3247, 3248, 3250
Kenwood	3005, 3006, 3007, 3014, 3055, 3060
Kodak	3016
LG	3233, 3238
Linksys	3223
Lloyd's	3021
Magnavox	3016, 3036, 3037, 3051, 3061, 3128, 3152, 3153, 3154, 3181, 3183, 3190, 3206, 3211
Magnin	3201
Marantz	3005, 3006, 3007, 3014, 3036
Matsushita	3016
Media center PC	3223

## VCR CODES

BRAND	CODES
MEI	3016
Memorex	3001, 3004, 3007, 3016, 3021, 3051
MGA	3023, 3038, 3201
Mind	3223
Minolta	3052
Mitsubishi	3023, 3038, 3039, 3060, 3108, 3203
Montgomery Ward	3001
Motorola	3001, 3016
Multitech	3021
NEC	3005, 3006, 3007, 3014, 3055, 3060
Niveus Media	3223
Northgate	3223
Olympus	3016
Optimus	3001
Optonica	3047
Orion	3004, 3202, 3213
Panasonic	3016, 3053, 3062, 3063, 3077, 3078, 3079, 3086, 3087, 3107, 3129, 3130, 3131, 3132, 3133, 3134, 3145, 3146, 3155, 3156, 3157, 3158, 3159, 3172, 3191, 3197, 3207, 3212, 3253
Penney	3201, 3212
Pentax	3052, 3059
Pentex Research	3014
Philco	3016, 3036, 3037
Philips	3016, 3036, 3047, 3061, 3071, 3135, 3160, 3161, 3173, 3208, 3216, 3243, 3244, 3246, 3250, 3251
Philips Magnavox	3135
Pioneer	3006, 3060
Polaroid	3111
Portland	3013
Proscan	3000
Pulsar	3051
Quarter	3007
Quartz	3007

# VCR CODES

---

## VCR CODES

<b>BRAND</b>	<b>CODES</b>
Quasar	3016, 3062, 3091, 3092, 3212
Radio Shack/Realistic	3001, 3007, 3011, 3016, 3021, 3023, 3029, 3047
RCA	3000, 3003, 3016, 3040, 3041, 3042, 3052, 3059, 3062, 3068, 3075, 3093, 3094, 3106, 3136, 3162, 3174, 3175, 3199, 3201, 3203, 3206, 3212, 3243, 3249, 3250
Realistic	3001, 3007, 3011, 3021, 3023, 3029, 3047
ReplayTV	3252
Ricavision	3223
Ricoh	3064
Runco	3051
Samsung	3011, 3069, 3084, 3089, 3101, 3148, 3184, 3214, 3215, 3218, 3232, 3243
Sanky	3001, 3051
Sansui	3004, 3006, 3055, 3060, 3202, 3211, 3213
Sanyo	3007, 3070, 3201
Scott	3011, 3038
Sears	3007, 3029, 3030, 3052, 3211
Sharp	3001, 3013, 3023, 3047, 3080, 3100, 3137, 3163, 3164, 3176, 3177, 3200
Shintom	3048, 3058
Signature	3001
Singer	3016, 3064
Sony	3048, 3049, 3058, 3085, 3104, 3138, 3139, 3140, 3178, 3179, 3187, 3192, 3195, 3209, 3211, 3217, 3223, 3224, 3225, 3226, 3240, 3245
Stack 9	3223
STS	3016, 3052
Sylvania	3016, 3021, 3036, 3037, 3038, 3061, 3088, 3095, 3105, 3147
Symphonic	3002, 3021
Systemax	3223
Tandy	3007
Tatung	3055



## VCR CODES

<b>BRAND</b>	<b>CODES</b>
Teac	3021, 3042, 3055
Technics	3016, 3053
Teknika	3016, 3021, 3050
Thomas	3211
Toshiba	3011, 3029, 3030, 3038, 3096, 3098, 3099, 3102, 3103, 3141, 3142, 3149, 3165, 3166, 3167, 3168, 3180, 3182, 3185, 3210, 3219, 3220, 3223, 3227, 3241
Touch	3223
Vector Research	3005, 3006, 3011
Victor	3006
Video Concepts	3005, 3006, 3011
Viewsonic	3223
Voodoo	3223
Wards	3001, 3011, 3016, 3021, 3023, 3047, 3052
White Westinghouse	3002
XR-1000	3016, 3021
Yamaha	3005, 3006, 3007, 3014, 3055
Zenith	3048, 3051, 3058, 3064, 3072, 3097, 3119, 3143, 3144, 3186, 3196, 3198, 3202, 3204, 3211, 3213
ZT Group	3223